

Auto Warning Tell-Tale Extensometer



75autowarning.jpg

Rating: Not Rated Yet

Price:

Variant price modifier:

Base price with tax:

Price with discount:

Salesprice with discount:

Sales price:

Sales price without tax:

Discount:

Tax amount:

[Ask a question about this product](#)

Description

Model-AWTT-O1 INTRODUCTION AWTT is primarily used in depillaring area. When bed separation exceeds certain value during depillaring operation (7mm in case of jhanjhara area) roof fall is likely to take place. AWTT is set to trigger at about 2mm less than specified value. When AWTT starts blinking, the machine & personnel are withdrawn to safer place.

<https://youtu.be/weBhGGtIct8>

[Download PDF](#)

Reviews

There are yet no reviews for this product.